

## Conversion instructions for lowering activation of the HESTAL Liftmaster 770

Intended for vehicle manufacturers and trained technical staff. Do NOT allow non-specialists to carry out any installation work!  
If there are any uncertainties or questions concerning the installation, please feel free to give us a call, and we will be glad to help.

Conversion of lower activation from temporary to permanent lowering is described. The cylinder pin is moved from the middle bore to the lowest bore.

For conversion from permanent to temporary lowering the cylinder pin must be moved from the lowest bore to the middle bore.

**The conversion must be executed as described below:**

- Step 1:** Open hand lever (see Fig. 1).
- Step 2:** Press the lowering lever until the cylinder pin is positioned centered to the mounting hole (see Fig. 2).
- Step 3:** Push out the cylinder pin from inside through the mounting hole (see Fig. 3) and remove it.
- Step 4:** Introduce the cylinder pin into the lowest mounting hole (see Fig. 4) and push it into the stop (see Fig. 5).

Fig. 1



Fig. 2

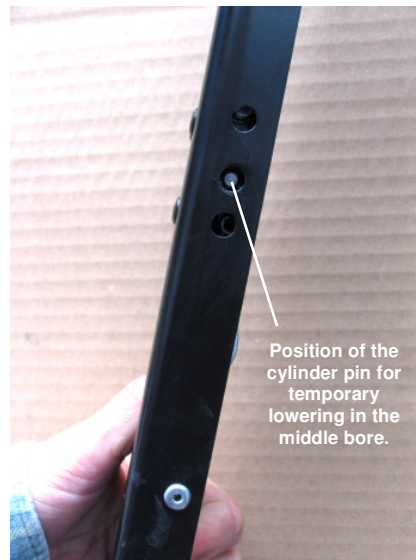


Fig. 3



Fig. 4



Fig. 5

