


Tyre Removal and Fitment Instructions for VIGIA Tyre Pressure Systems


Refer to included diagrams*

Tyre Removal on a Vehicle fitted with VIGIA Tyre Pressure System.

1. Turn off the VIGIA Tyre Pressure System by depressing Main Power Switch on the Control Box.

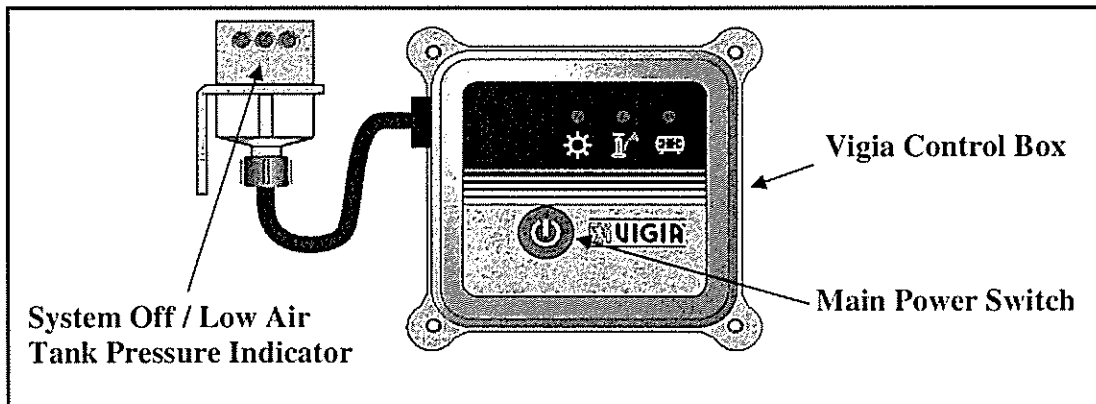

2. Pull off the silver Protective Cover (Part 1) from the Central Rotator (Part 4).
3. Unscrew both Connectors (Part 2) at the Rotor end of the Hoses (Part 3).
4. Only the residual pressure in the hoses will now vent. Tyre pressure will remain constant.
5. Remove the inflated Tyres from the vehicle and place them in an inflation cage.
6. Unscrew Hoses (Part 3) from Tyre Valves. Air will now start to vent from the Tyres through the Valve Stems and the Tyre will deflate.

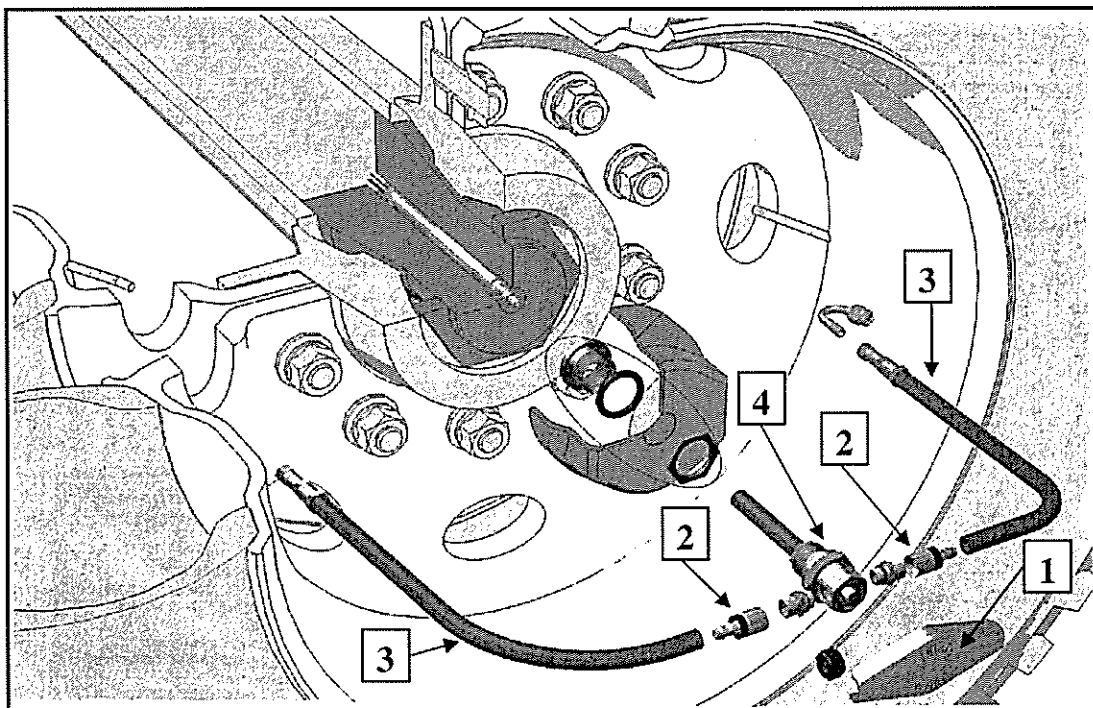

Tyre Re-fitment on a Vehicle fitted with VIGIA Tyre Pressure System.

1. While still in the inflation cage, re-inflate the Tyres to a pressure lower than that produced by the VIGIA Tyre Pressure System.
2. Re-fit the Tyres to the vehicle in the usual manner.
3. Reconnect the Hoses (Part 3) to the Tyre Valves.
4. Reconnect both Hoses to Central Rotor (Part 4) by retightening both Connectors (Part 2).
5. Refit the silver Rotor Cover (Part 1) to Central Rotator (Part 4).
6. Turn on the VIGIA system via the Main Power Switch on the Control Box.
7. The VIGIA Tyre Pressure System will now bring the Tyre pressure up to the required pressure that has been pre-set into the VIGIA system.

* For complete details on the VIGIA Tyre Pressure system please refer to the VIGIA Technical Manual available from BPW Transpec or their approved agents.